




Eave with vented soffit

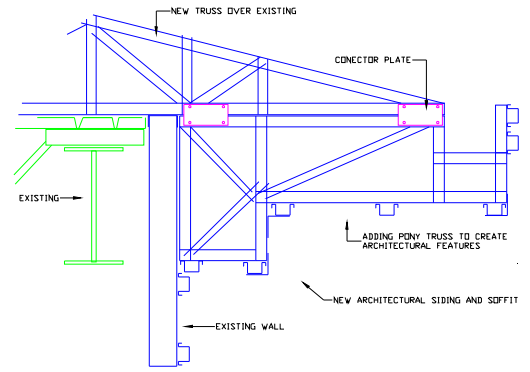


Adding truss to create architectural features

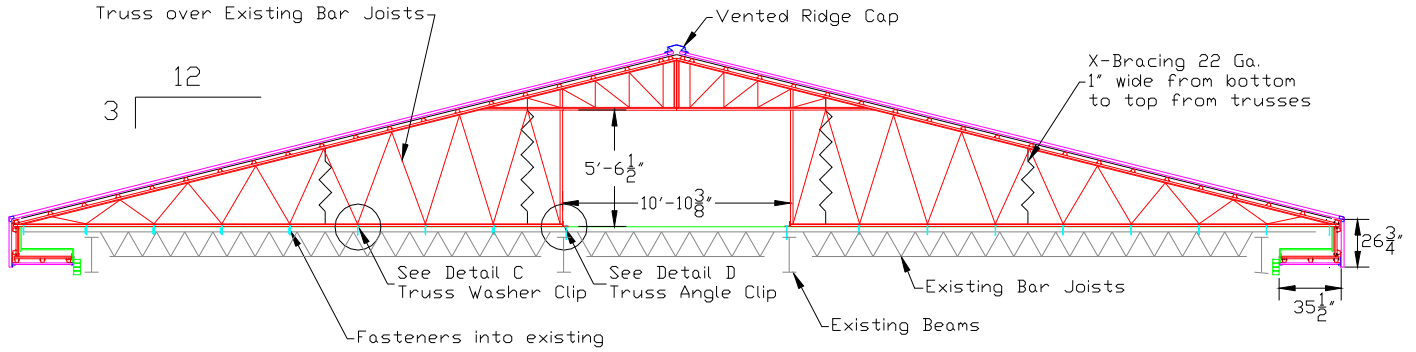


Typical cut section with mechanical walkway

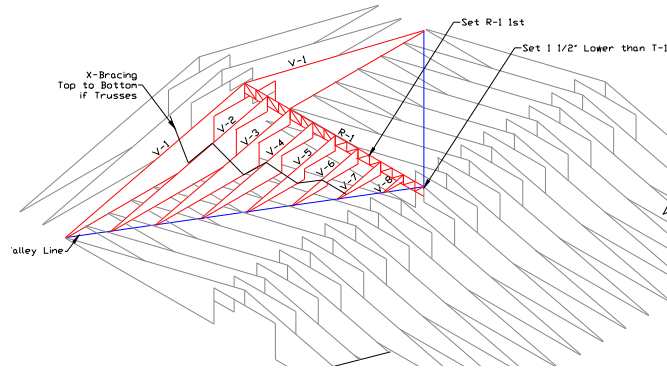

Typical Valley truss layout with Mechanical walkway

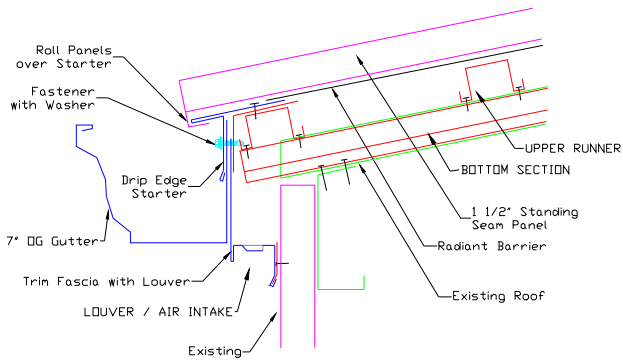

Vented Eave / Drip edge

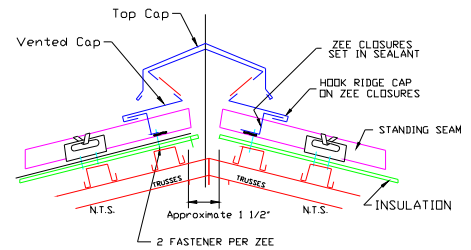

Vented Ridge cap

END OF SECTION

